



## 4. Installing John Cooper Works Tuning Kit

### 4.2 Installing air filter

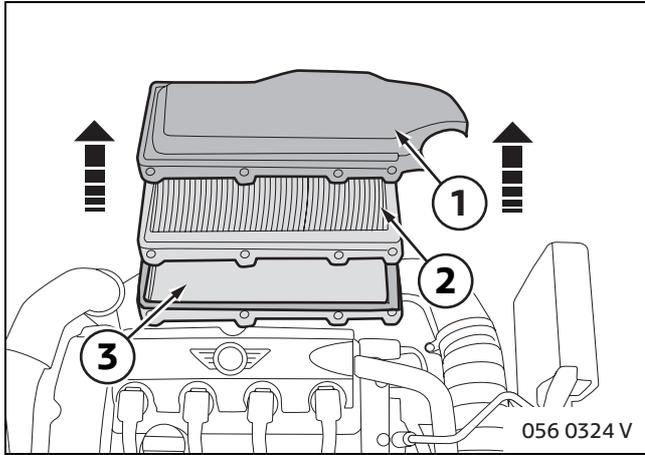


Remove the upper section of air filter housing (1) and remove filter element (2). The bottom section of the air filter housing (3) remains in the vehicle.

▣ The upper section of the air filter housing (1) and filter element (2) are no longer required. ◀

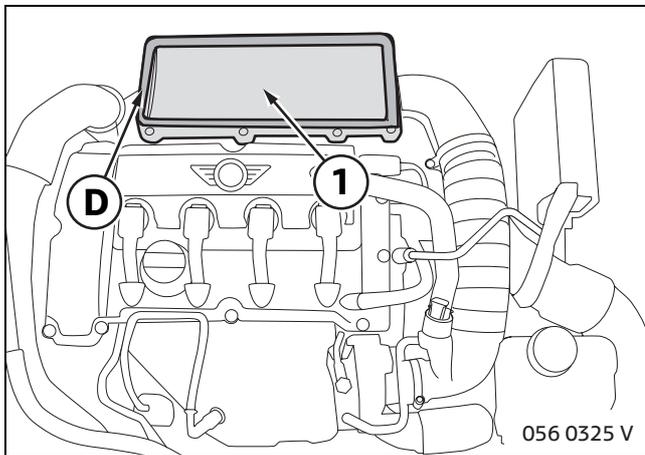

Fit seal **D** on bottom section of air filter housing (1).

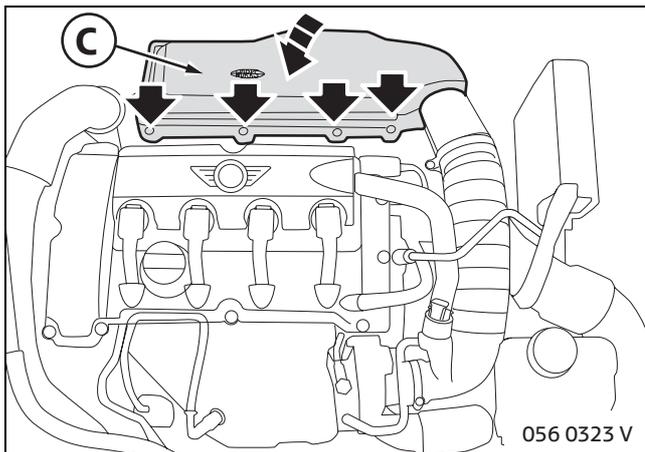

Fit air filter **C** on bottom of housing and secure as per TIS No. 13 71 000.