

“RS” style door pull straps

Mini - R55, R56, R57

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

- (2) Handle brackets
 - (2) 00 Grommets MC86625K31
 - (2) 8-32 x 5/16" SS Button Head Screw MC92949A191
- (2) Handle Straps 4.25"
- (2) Handle cover plates

For an installation video of this product, go to www.rennline.com and search for P/N DH24, then click the video link.



Step 1: Put window in the down position. Using a screw driver with tape wrapped around the tip, carefully pry off, (1) armrest, (2) handle surround (remove small plug at bottom) and the (3) main door card. See photo for locations. Don't be afraid, they do all just pull off.



Step 2: Your door should now look like this.



Step 3: Release the rubber boot on the front of door.



Step 4: Remove the (11) torx head screws located all the way around the door component housing. We have circled 2 of these for you in the photo above.



Step 5: Remove the (2) torx head screws and the 10mm nut on the front of the door as shown in the photo above.




Step 6: Remove the (3) torx head screws and bracket on the rear of the door as shown in photo above.



Step 7: The door component housing should now be free from the door frame. Lift assembly up a bit and pull the front of the assembly away from the door about 2 inches as shown in photo above.



Step 8: Wedge a piece of foam board (or equivalent) between the window glass and the component housing. This will allow you to release the cable from the back side of the interior door handle.

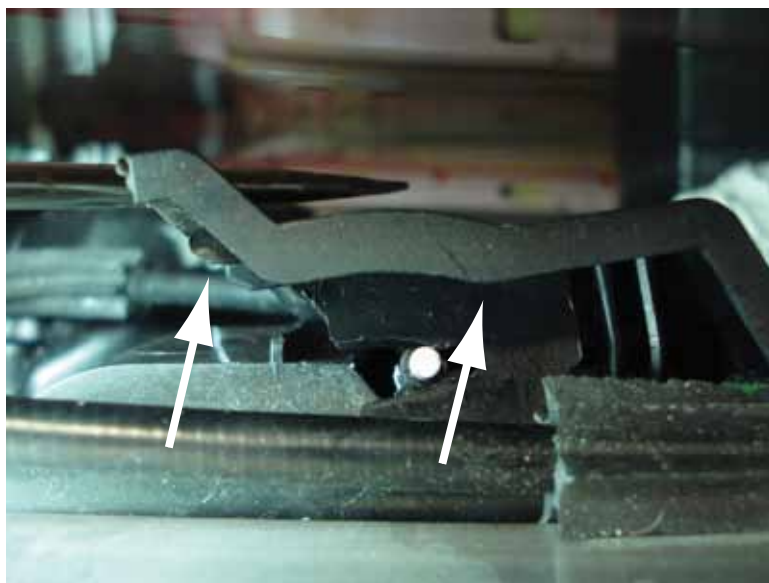


Step 9: Using a screw driver or small hands (if you have them), release the handle cable clip from the back side of the interior handle assembly. Pry it toward the door skin.



Step 10: Remove the (2) torx head screws from the interior handle assembly and remove it from the component housing.



Step 11: Remove the handle pin and the handle from the assembly as shown in photo.

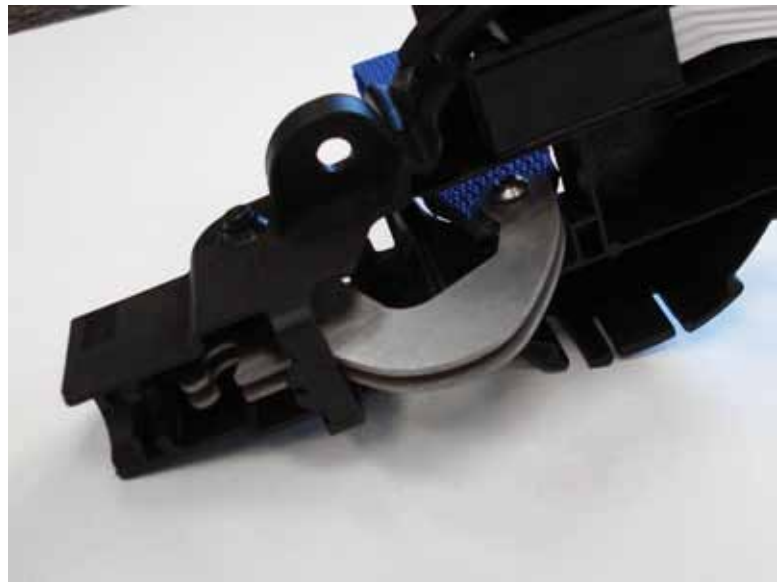

Step 12: Install the Renline handle assembly using the factory pin as shown above. Note, factory spring will no longer be used.



Step 13: Now do everything that you did in steps 1-12 in reverse. When you get to the door handle surround, insert the Renline handle cover prior to installing it, as shown above. Now move to the other side of the car.