





## Installation Instructions / Quick start

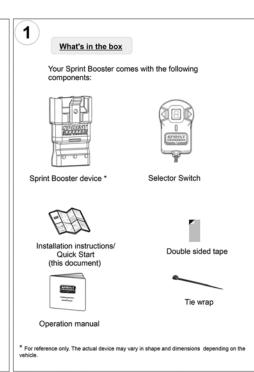

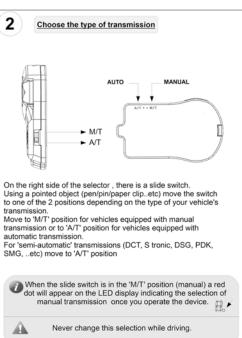


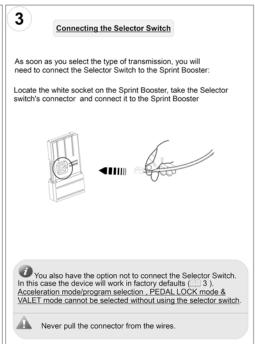



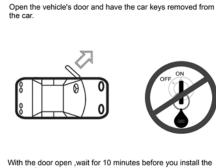

4



Remove the harness


connector from the pedal.




With the door open ,wait for 10 minutes before you install the device. During this time the vehicle is checking the electronic systems of the car through the CAN bus system.



This step is important to allow the CAN bus system to complete the diagnostic testing and avoid having the check engine light to come On.

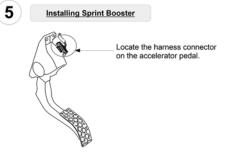




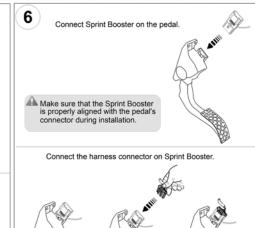

- Make sure all connections are firmly in place (both harness connector and Sprint Booster are

properly connected).

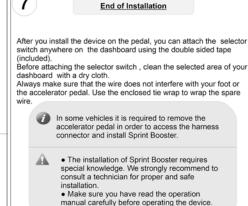


The above are general instructions applying to most vehicles . In some vehicles the installation may vary .Please contact our authorized



dealer network for further information.



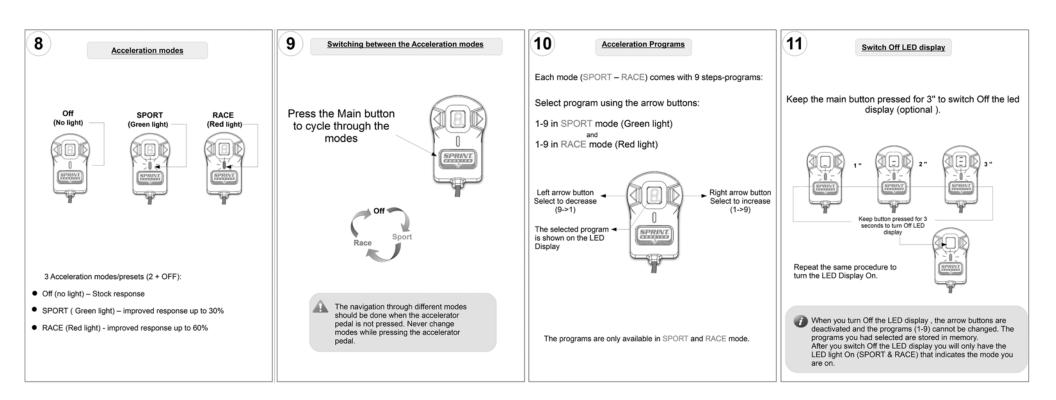

This document contains basic information in order to install and start using the product in Acceleration mode. Make sure you have read the user guide before operating the device. Valet Mode and Pedal lock mode are explained in detail in user guide.